


# Instructions for RJ45 plug to RS485

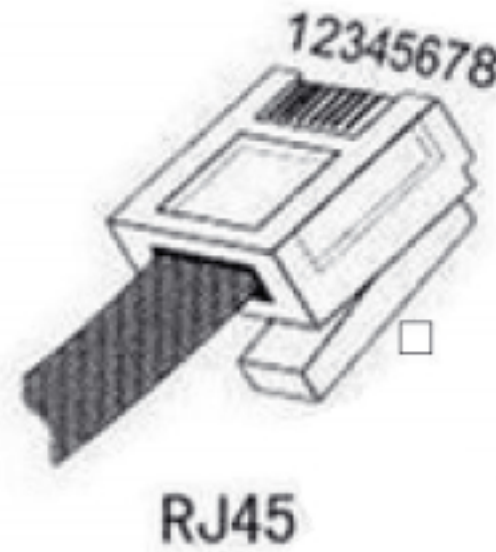

**RJ45 plug definition**  
 7 feet connect T/R- of RS485  
 8 feet connect T/R+ of RS485  
 1 Pin connects GND

**Default Control Protocol: Bit Rate: 2400 Data Length: 8 Parity: N Stop Bit: 1**

A data string to send more than 4 times, the above connection method according to the customer use of the central control terminal will be some differences, specific reference to the central control computer description.


T/R+  
 T/R-  
 GND  
 +5V  
 RS232TX

# Instructions for RJ45 plug to RS232

The 8 pins of RJ45 connect the 5 pins of RS232 GND  
 The 7 legs of RJ45 connect the 3 TX of RS232

Code execution action

FF EE EE EE AA  
 LOG  
 FF EE EE EE CC STOP  
 FF EE EE EE DD UP  
 FF EE EE EE EE DOWN  
 FF EE EE EE 60 HDMI  
 FF EE EE EE 62 VGA



RS-232

Pins and functions

1. Carrier Detection	2. Data receiving (RXD)	3. Sending data (TXD)
4. Data Terminal Ready	5. Signal Ground	6. Data Device Ready
7. Request send	8. Permission to send	9. Ringing instruction