


HKM02B: Quick Guide

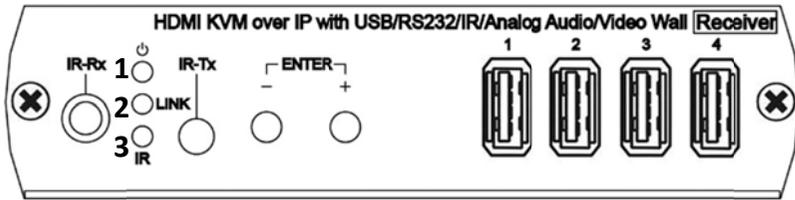

- 1. Power (Green)
 - On – Device ready
 - Flashing – System booting
- 2. LINK (Blue)
 - On– Link connected
 - Flashing- Trying to connect or no input source

- 3. IR (Red)
 - On – Receive IR signal

Button Instruction:

Button	-	+	- and + together
Short Press	*Reduce Number	*Increase Number	Enter
Press 3 seconds	-	-	Menu/Cancel

Reduce Number: switches channel or function number down

Increase Number: switches channel or function number up

Trouble Shooting

- HDCP fail: Please use the receiver remote or front panel and enable Menu 49 “HDCP always On” function on the receiver box. (Press: Menu -> 49 -> Enter -> 1 -> Enter)
- No display: Please force 1080p 60 Hz output on the receiver box by pressing “Menus -> 41 -> Enter -> 3-> Enter” on the receiver remote or front panel.
- Make sure the Transmitter & Receiver are on the same Channel
- Reset to Default: Menu -> 333 -> Enter

Point to Point Application

Step 1. Setup the Remote

Note: This remote can only control either Tx or Rx.

This Process only sets up the remotes.

You don't have to point the remote to the devices.

Transmitter (Tx)



Receiver (Rx)



Press ① & ⑦ at the same time

Press ① & ⑧ at the same time

*MSG light will light when receive remote signal

Step 2. Plug and Use



If there are multiple systems on the same network, please make sure each pair is on a different channel. *Default Channel “0”

Multi to Multi Application

Step 1. Setup the Remote

Note: This remote can only control either Tx or Rx

Transmitter (Tx)



Receiver (Rx)



Press **Ⓟ** & **⑦** at the same time Press **Ⓟ** & **⑧** at the same time

*MSG light will light when receive remote signal

Step 2. Setup the Transmitter Box to the Desired Channel



Transmitter:

Rotate the blue switch to desired channel




Each Transmitter has to be on a different Channel

Step 3. Setup the Gigabit Mangement Switch

1. Enable IGMP V2
2. Setup Jumbo Frame 8K or above

Note: Please find the instruction on the Ethernet switch manual or see the setup example under the trouble shooting section in the manual

Step 4. Connect Transmitter & Receiver to Gigabit Mangement Switch

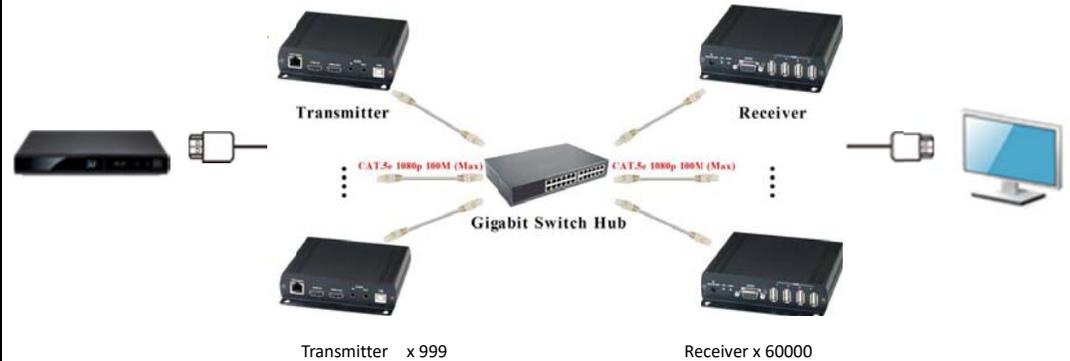

Receiver:

Press "+" or "-" to the desired channel number and Press "+" and "-" at the same time to confirm (enter)

Using Remote:

Press channel number -> Enter

Step 5. Download the Software

PC Software: <http://tiny.cc/n5gc0y>

Mobile App: B&W Video Wall Control

Android



IOS



Quick guide V6 190813