

# User Manual

## SM42T

### 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs



All Rights Reserved

Version: SM42T\_2019V1.3

### Preface

Read this user manual carefully before using the product. Pictures shown in this manual are for reference only. Different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till June 2019. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

### FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



### SAFETY PRECAUTIONS

To ensure the best performance from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment.
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the specifications of product may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, and please treat them as normal electrical wastes.

## **Table of Contents**

1. Product Introduction.....	1
1.1 Features .....	1
1.2 Package List .....	2
2. Specification .....	3
2.1 4x2 4K Presentation Switcher.....	3
2.2 HDBaseT Receiver .....	5
3. Panel Description.....	6
3.1 Switcher Front Panel .....	6
3.2 Switcher Rear Panel.....	7
3.3 Receiver Front and Rear Panel .....	8
4. System Connection.....	9
4.1 Usage Precaution .....	9
4.2 System Diagram .....	9
5. Button Control.....	10
5.1 Manual Switching .....	10
5.2 Automatic Switching .....	10
5.3 Sound Volume Control.....	10
6. IR Remote Control .....	11
7. GUI Control.....	12
7.1 Video Switching .....	13
7.2 Audio Control .....	14
7.3 EDID Management .....	16
7.4 CEC Control .....	17
7.5 Tags Setting.....	19
7.6 RS232 Control .....	20
7.7 Network Setting .....	22
7.8 Password Setting.....	23
7.9 GUI Update.....	24
8. RS232 Control .....	25
8.1 RS232 Control Software.....	25

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

---

8.2 RS232 Communication Command .....	27
8.2.1 Device Control .....	27
8.2.2 Source Switching .....	28
8.2.3 Audio Control .....	29
8.2.4 Preset Setting .....	30
8.2.5 EDID Management .....	30
8.2.6 CEC Control .....	32
8.2.7 Third-party Device Control .....	34
9. Firmware Upgrade .....	35
10. Panel Drawing .....	36
11. Troubleshooting & Maintenance .....	37
12. Customer Service .....	38

### 1. Product Introduction

Thanks for choosing the professional 4x2 HDMI 2.0 presentation switcher with an HDBaseT receiver. The switcher is designed to switch HDMI or DP video signal to HDMI and HDBaseT output. It provides three HDMI inputs, one DP input, one HDMI output and one HDBaseT output. The HDBaseT output supports PoC and can connect compatible HDBaseT receiver up to a maximum of 70 meters (230 feet).

The switcher supports input video resolution up to 4Kx2K@60Hz 4:4:4. With multiple built-in EDID settings, including an EDID pass-through option, the highest quality digital video signal will be routed directly to the display.

The switcher supports stereo and multichannel audio on the HDMI or DP input. In addition to the audio embedded in the HDMI and HDBT output stream, which may be muted, the audio is simultaneously de-embedded to an analog audio output.

The switcher features multiple methods of control. When set to Auto, the switcher will automatically switch to the newest source device added to the switcher; when the active source is removed, the switcher will switch to the first detected input. The switcher can be manually controlled by front panel buttons, IR, RS232, and GUI.

#### 1.1 Features

- The transmission distance between the switcher and HDBaseT receiver can up to 70m at 1080p, and 40m at 4K video.
- Supports automatic switching.
- HDMI and DP video resolution up to 4Kx2K@60Hz 4:4:4.
- Supports HDMI 2.0, HDCP 2.2 compliant.
- Supports DP 1.2 and Multi-Stream Transport (MST).
- The MIC and LINE input can be mixed to audio outputs.
- 3-type microphone input, supports condenser microphone, dynamic microphone and wireless microphone.
- Smart EDID management: Four built-in preset EDIDs for various applications and customized setting allowed.
- Supports 12V PoC.
- Controllable by front panel buttons, IR remote, RS232 and GUI.
- Supports firmware upgrade.

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

---

### 1.2 Package List

---

HDMI 2.0 Presentation Switcher	<ul style="list-style-type: none"><li>• 1x SM42T 4x2 4K Presentation Switcher</li><li>• 2x Mounting Ears with 4 Screws</li><li>• 4x Plastic Cushions</li><li>• 1x IR Receiver</li><li>• 1x IR Emitter</li><li>• 1x IR Remote</li><li>• 2x 3-pin Terminal Blocks</li><li>• 1x 5-pin Terminal Block</li><li>• 1x RS232 Cable (3-pin to DB9)</li><li>• 1x Power Adaptor (24V DC 2.71A)</li></ul>
HDBaseT Receiver	<ul style="list-style-type: none"><li>• 1x TPUH610AR HDBaseT Receiver</li><li>• 2x Mounting Ears with 2 Screws</li><li>• 4x Plastic Cushions</li><li>• 1x 3-pin Terminal Block</li></ul>
	<ul style="list-style-type: none"><li>• 1x User Manual</li></ul>

**Note:** Please contact your distributor immediately if any damage or defect in the components is found.

## 2. Specification

### 2.1 4x2 4K Presentation Switcher

<b>Video</b>	
Video Input	(1) HDMI/MHL, (3) HDMI, (1) DP
Video Input Connector	(3) Type-A female HDMI, (1) DisplayPort
HDMI Input Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
MHL Input Resolution	Up to 1080P@60Hz
DP Input Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
Video Output	(1) HDMI, (1) HDBT
Video Output Connector	(1) Type-A female HDMI, (1) RJ45
HDMI Output Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
HDBT Output Resolution	Up to 4Kx2K@60Hz 4:4:4 8bit
HDMI Version	2.0
HDCP Version	2.2
MHL Version	2.2
DP Version	1.2
HDR	Supported
CEC	Supported
HPD	Supported
<b>Audio Input</b>	
Input	(1) MIC, (1) LINE
Input Connector	(2) 3-pin terminal blocks
HDMI Input Audio Format	PCM 7.1 audio, Dolby Atmos®, Dolby® TrueHD, Dolby Digital® Plus, DTS:X™, and DTS-HD® Master Audio™ pass-through
DP Input Audio Format	8 channels LPCM, up to 24bit 192KHz, AC3, DTS
LINE/MIC Input Audio Format	PCM
Audio Input Impedance	>10KΩ
<b>Audio Output</b>	
Output	(1) L/R balanced analog audio
Output Connector	(1) 5-pin terminal block
Output Analog Audio Format	PCM
HDMI Output Audio Format	<b>Bypass Mode:</b> PCM 7.1 audio, Dolby Atmos®, Dolby® TrueHD, Dolby Digital® Plus, DTS: X™, and DTS-HD® Master Audio™ pass-through. <b>Mix Mode:</b> PCM 7.1 audio.



## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

DP Output Audio Format	<b>Bypass Mode:</b> 8 channels LPCM, up to 24bit 192KHz, AC3, DTS. <b>Mix Mode:</b> 8 channels LPCM, up to 24bit 192KHz, AC3, DTS.
Max Output Level	<0.1% (-80 dB), 20Hz – 20KHz bandwidth, 1KHz sine at 0 dBFS level (or max level)
THD+N	<0.1% (-80 dB), 20Hz – 20KHz bandwidth, 1KHz sine at 0 dBFS level (or max level)
SNR	>80dB
Crosstalk Isolation	>75dB, 10KHz sine at 0dBFS level (or max level before clipping)
L-R Level Deviation	<0.5dB, 1KHz sine at 0dBFS level (or max level before clipping)
Frequency Response Deviation	<±0.5 dB, 20Hz ~ 20KHz
Output Load Capability	1KΩ and higher (supports 10x paralleled 10KΩ loads)
<b>Control</b>	
Control Port	(1) IR IN, (1) IR OUT, (1) IR EYE, (1) FIRWARE, (1) RS232, (1) TCP/IP
Control Connector	(3) 3.5mm mini jacks, (1) Type-A USB, (1) 3-pin terminal block, (1) RJ45
<b>General</b>	
Transmission Distance	1080P≤70m, 4Kx2K≤40m
Bandwidth	18Gbps
Operation Temperature	-10℃ ~ +55℃
Storage Temperature	-25℃ ~ +70℃
Relative Humidity	10%-90%
External Power Supply	Input: AC 100~240V, 50/60Hz, Output: 24V DC 2.71A
Power Consumption	27W (Max)
Dimension (W*H*D)	220mm x 44mm x 172.5mm
Net Weight	735g


## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 2.2 HDBaseT Receiver

Video Input	(1) HDBT
Video Input Connector	(1) RJ45
Video Output	(1) HDMI
Video Output Connector	(1) Type-A female HDMI
Control Port	(1) IR IN, (1) IR OUT, (1) RS232
Control Connector	(2) 3.5mm mini jacks, (1) 3-pin terminal block
<b>General</b>	
Transmission Distance	1080P≤70m, 4Kx2K≤40m
Resolution	Up to 4K×2K@60Hz 4:4:4 8bit
Bandwidth	18Gbps
HDMI Version	2.0
HDCP Version	2.2
Power Consumption	14W (max)
Operation Temperature	-10°C ~ +55°C
Storage Temperature	-25°C ~ +70°C
Relative Humidity	10%-90%
External Power Supply	Input: 100VAC~240VAC, 50/60Hz, Output: 12V DC 2A
Dimension (W*H*D)	115mm x 16 mm x 84mm
Net Weight	153g


### 3. Panel Description

#### 3.1 Switcher Front Panel

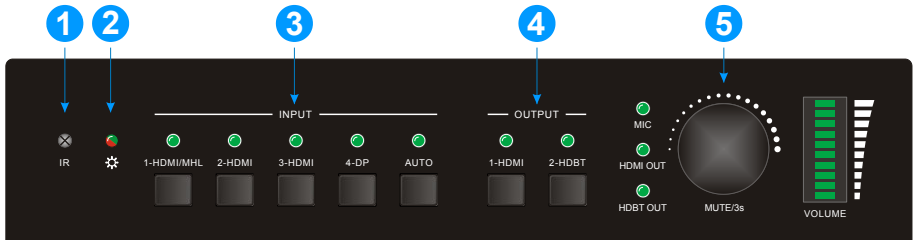

- ① **IR:** Built-in IR sensor to receive IR signal from IR remote.
- ② **Power LED:** The LED illuminates green when the device is in standby, or illuminates red when the device is powered on.
- ③ **INPUT:**
  - Press the 1~4 button to select input source respectively, and its corresponding LED illuminates green.
  - Press the **AUTO** button to enable automatic switching mode, and its LED illuminates green. Press again to exit.
- ④ **OUTPUT:** Press the button to select output channel.
- ⑤ **Volume Knob and LED:**
  - Press the knob in to toggle among **MIC**, **HDMI OUT** and **HDBT OUT** audio control, and the corresponding LED will illuminate green.
  - Rotate the knob to increase or decrease the volume of the selected audio.
  - Press and hold the knob at least three seconds to mute the selected audio. Rotate the knob to unmute.

### 3.2 Switcher Rear Panel

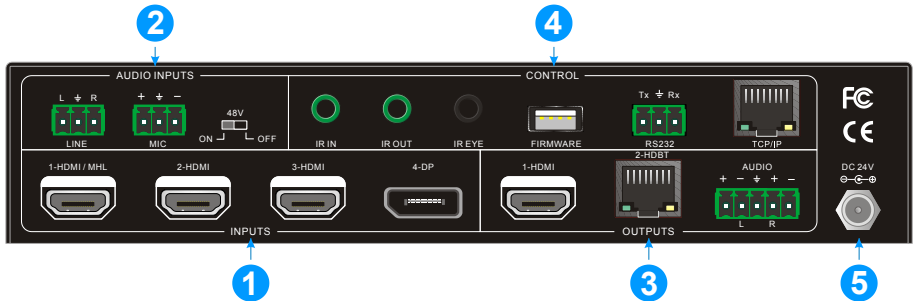

#### ① INPUT:

- Three type-A female HDMI input ports to connect HDMI video source.
- One DisplayPort input port to connect DisplayPort video source.

#### ② AUDIO INPUTS:

- **LINE:** 3-pin terminal block to connect wireless microphone or line audio input source.
- **MIC:** 3-pin terminal block to connect condenser or dynamic microphone input.

#### ③ OUTPUTS:


- **1-HDMI:** Type-A female HDMI output port to connect video display.
- **2-HDBT:** Supports PoC, RJ45 connector to connect the HDBaseT receiver by CATx cable.

#### ④ CONTROL:

- **IR IN:** 3.5mm mini jack to connect an IR receiver for IR pass-through control.
- **IR OUT:** 3.5mm mini jack to connect an IR emitter for IR pass-through control.
- **IR EYE:** 3.5mm mini jack to connect IR receiver to control the switcher by the included IR remote.
- **FIRMWARE:** Type-A USB port for firmware upgrade.
- **RS232:** 3-pin terminal block to connect control device (e.g. PC) to control the switcher by sending RS232 commands. It also supports RS232 pass-through control.
- **TCP/IP:** RJ45 connector to connect control device (e.g. PC) to control the switcher by GUI.

#### ⑤ DC 24V: DC barrel port for power adapter connection.

### 3.3 Receiver Front and Rear Panel

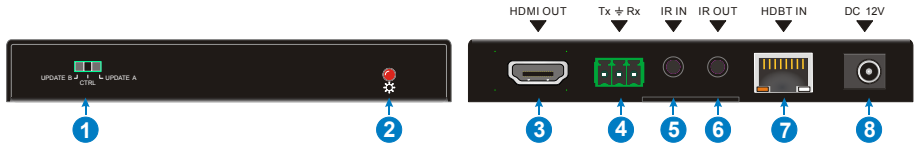

#### ① **MODE Switch:**

- **CTRL:** RS232 pass-through control mode.
- **UPDATE A:** Update Valens IC program, connect a PC to the RS232 port, and then double-click the update file (.bat).
- **UPDATE B:** Update compression IC program, the upgrade method is the same as the above UPDATE A.

#### ② **Power LED:** The LED illuminates red when the device is powered on.

#### ③ **HDMI OUT:** Type-A female HDMI output port to connect video display.

#### ④ **RS232:** 3-pin terminal block for RS232 pass-through control.

#### ⑤ **IR IN:** 3.5mm mini jack to connect an IR receiver for IR pass-through control.

#### ⑥ **IR OUT:** 3.5mm mini jack to connect an IR emitter for IR pass-through control.

#### ⑦ **HDBT IN:** RJ45 connect to connect the switcher by CATx cable.


#### ⑧ **DC 12V:** DC barrel port for power adapter connection.

## 4. System Connection

### 4.1 Usage Precaution

- Make sure all components and accessories included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on.

### 4.2 System Diagram

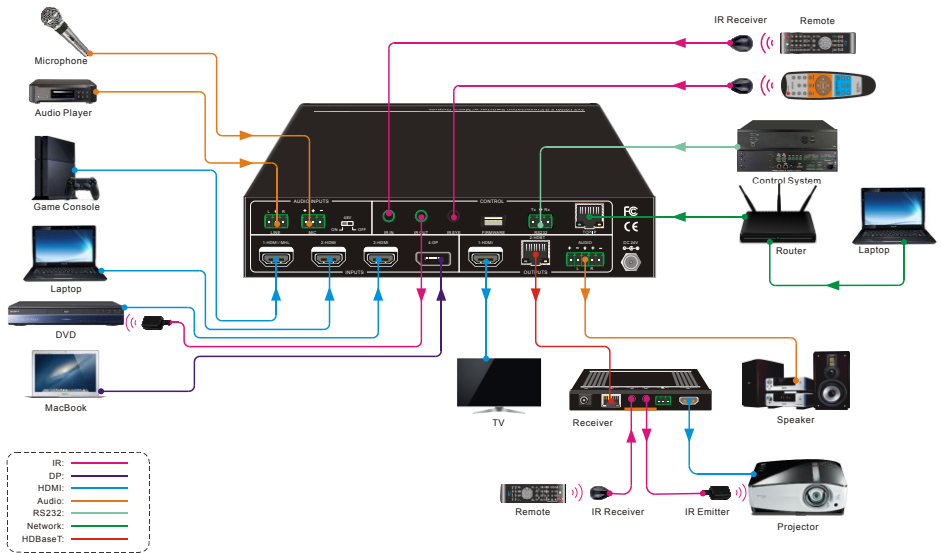

# 5. Button Control

## 5.1 Manual Switching

When the switcher is in manual switching mode, the Auto Mode LED will be dark. To change the input source, directly press the **1-HDMI**, **2-HDMI**, **3-HDMI** or **4-DP** button, and the corresponding LED illuminates green immediately. To change the output source, press **1-HDMI** or **2-HDBT** button, and its LED illuminates green immediately.

## 5.2 Automatic Switching

Press **1-HDMI** or **2-HDBT** output button, and then press **AUTO** button to enable automatic switching. The Auto mode LED will light.

When in Auto mode, the switcher will switch according to the following rules:

- *New input: Upon detecting a new input, the switcher will automatically select the new input.*
- *Reboot: Once power is restored to the switcher, it will automatically reconnect the input before powered off.*
- *Source removed: When an active source is removed, the switcher will switch to the first available active input starting at HDMI input 1.*
- *Press the INPUT button (**1-HDMI**, **2-HDMI**, **3-HDMI** or **4-DP**) can forcibly change the input source. If the corresponding source device is active, it will be switched as input source. If not, the switcher will switch to the first available active input starting at HDMI input 1.*


## 5.3 Sound Volume Control

Press Volume Knob to choose MIC, HDMI OUT or HDBT OUT audio needs to be adjusted, the corresponding LED will turn green and keep on.

- *Adjusting the Volume Knob in clockwise direction to increase sound volume.*
- *Adjusting the Volume Knob in anti-clockwise direction to decrease sound volume.*
- *Press and hold the Volume Knob at least three seconds to mute the selected audio. Rotate the knob to unmute.*

## 6. IR Remote Control

Connect the **IR EYE** port to an IR receiver, the switcher can be controlled by the below IR remote.

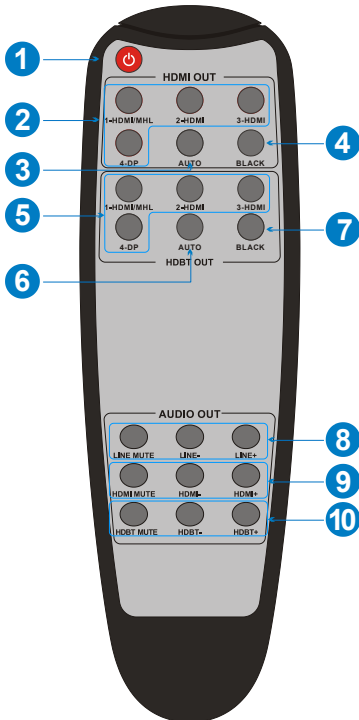

- ① Enter or exit standby mode.
- ② Select input source for HDMI output.
- ③ Enable/disable automatic switching mode for HDMI output.
- ④ HDMI output black screen.
- ⑤ Select input source for HDBT output.
- ⑥ Enable/disable automatic switching mode for HDBT output.
- ⑦ HDBT output black screen.
- ⑧ LINE audio control: Mute, Volume Down and Volume Up.
- ⑨ HDMI output audio control: Mute, Volume Down and Volume Up.
- ⑩ HDBT output audio control: Mute, Volume Down and Volume Up.




### 7. GUI Control

The switcher also be controlled via TCP/IP. The default IP settings are:

IP Address: 192.168.0.178

Subnet Mask: 255.255.255.0

Type **192.168.0.178** in the internet browser, it will enter the below log-in webpage:

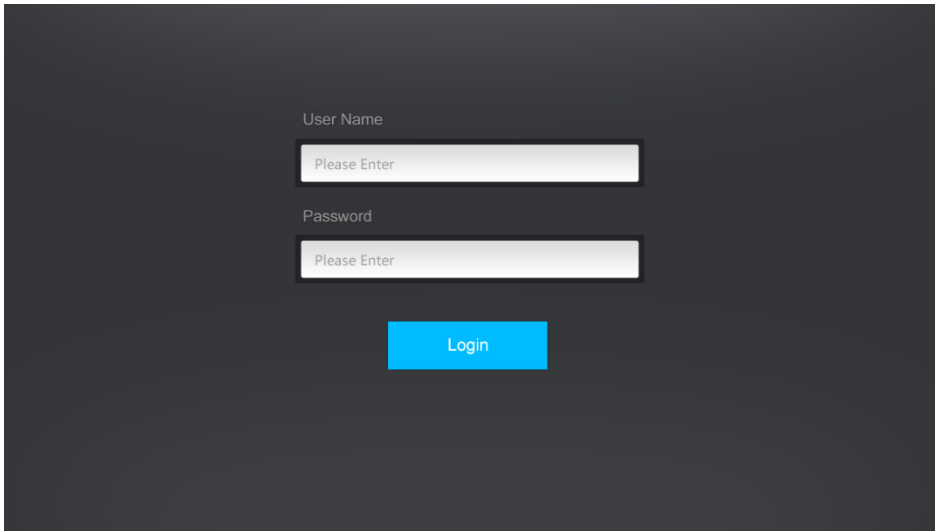

User Name

Password


Login

**Username:** admin

**Password:** admin

### 7.1 Video Switching


Type the user name and password, and then click **Login** to enter the section for video switching.

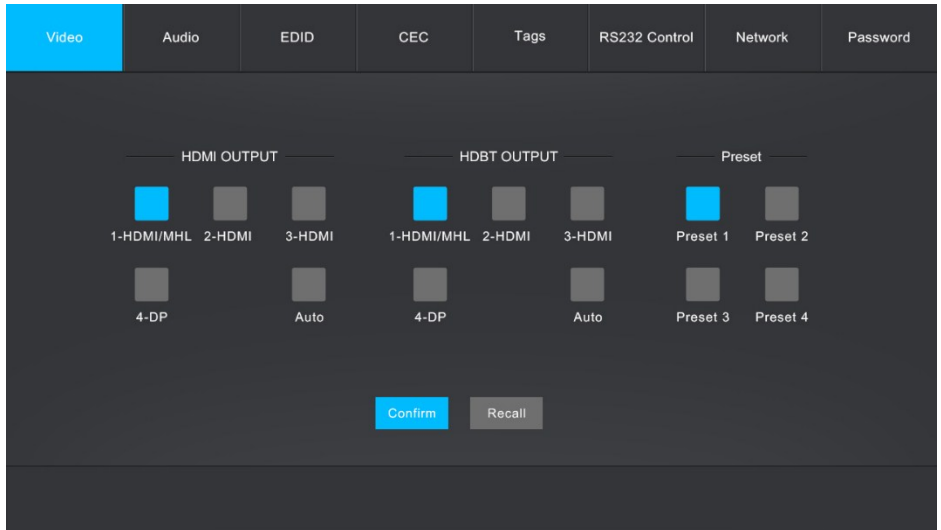

- **HDMI OUTPUT:** Switch the selected input source to HDMI output.
- **HDBT OUTPUT:** Switch the selected input source to HDBT output.
- **Preset:** Save the current routing status to preset 1~4.


### 7.2 Audio Control

#### 1) Input audio control

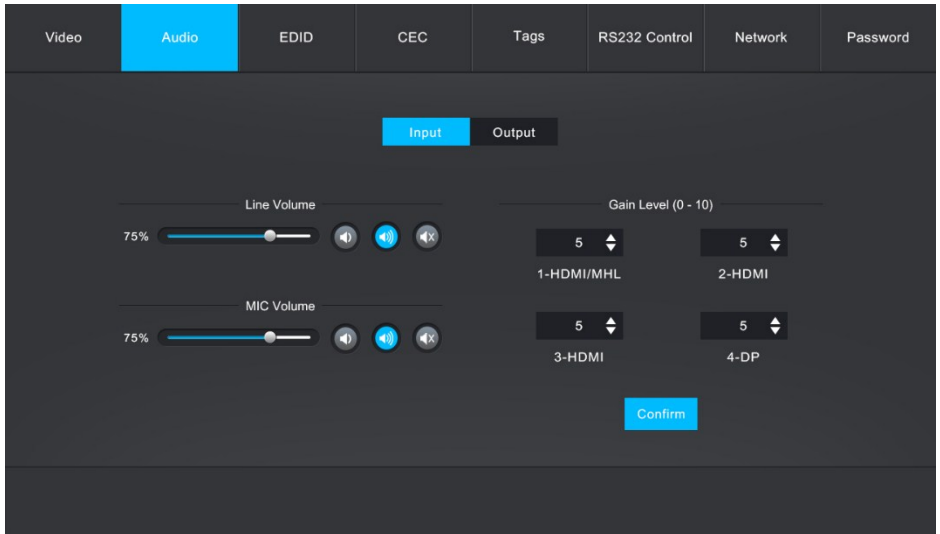


- **Line Volume:** Mute, Volume Up or Volume Down.
- **MIC Volume:** Mute, Volume Up or Volume Down.
- **Gain Level:** Adjust the gain level for input audio source.

### 2) Output audio control

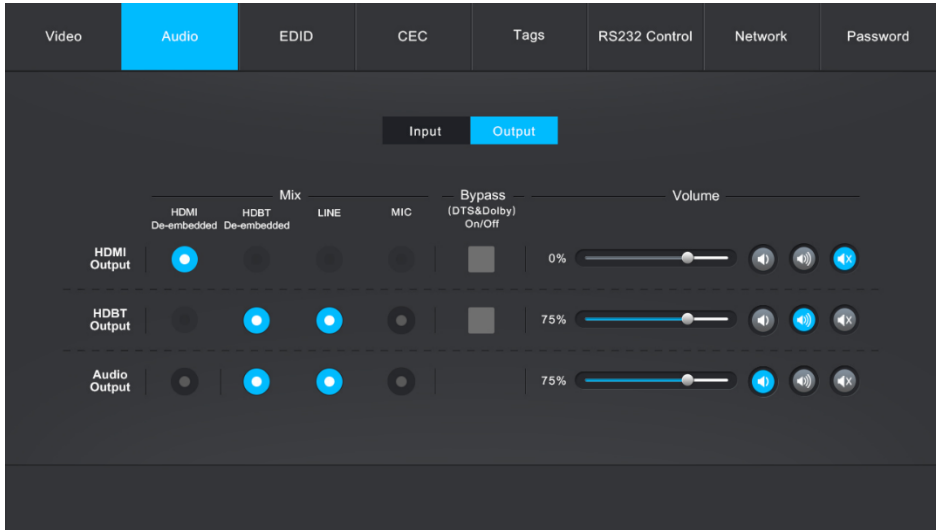

- **Mix:** Audio mixing output.
  - ✓ **Step1:** Select **HDMI De-embedded** or **HDBT De-embedded** audio source for HDBT Output and Audio Output (5-pin) respectively. Note that the HDMI output can not be mixed with other audio, and it only output **HDMI De-embedded** audio.
  - ✓ **Step2:** Select **LINE** or **MIC**, or both of them to mix with the HDMI de-embedded audio or HDBT de-embedded audio. If select **MIC** or **LINE** for the HDBT Output, the Audio Output will automatically select the same audio.
- **Volume:** Volume control bar for output audio. Mute, Volume Up or Volume Down.
- **Bypass:** Enable or disable Bypass mode. The default is OFF, the audio output format is PCM. When in Bypass mode, the output audio format is the same as the input audio and the output volume cannot be adjusted by the volume control bar.

### 7.3 EDID Management

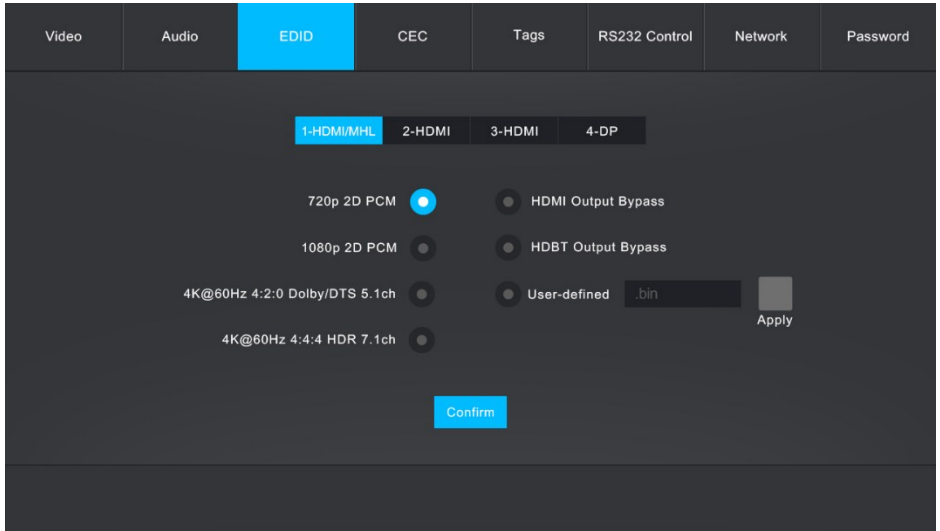


- Select the compatible built-in EDID for 1-HDMI/MHL, 2-HDMI, 3-HDMI, or 4-DP input source.
- Upload user-defined EDID.

### 7.4 CEC Control

If the input sources and display are supports CEC, they can be controlled by the below control buttons to replace IR remote.


#### 1) 1-HDMI Output Channel

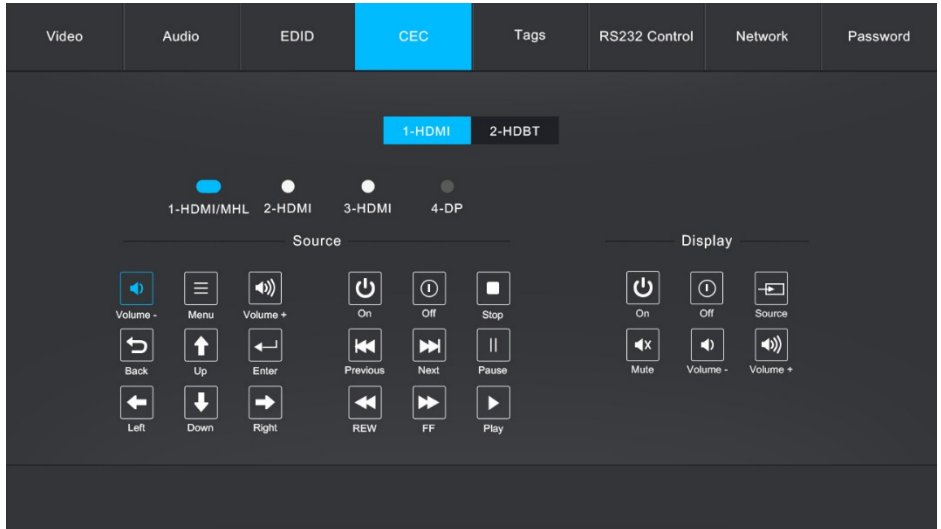

- **Source Control:** Select the input source which needs to be control, and then press source control button as need.
- **Display Control:** Press control button as need.

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 2) 2-HDBT Output Channel

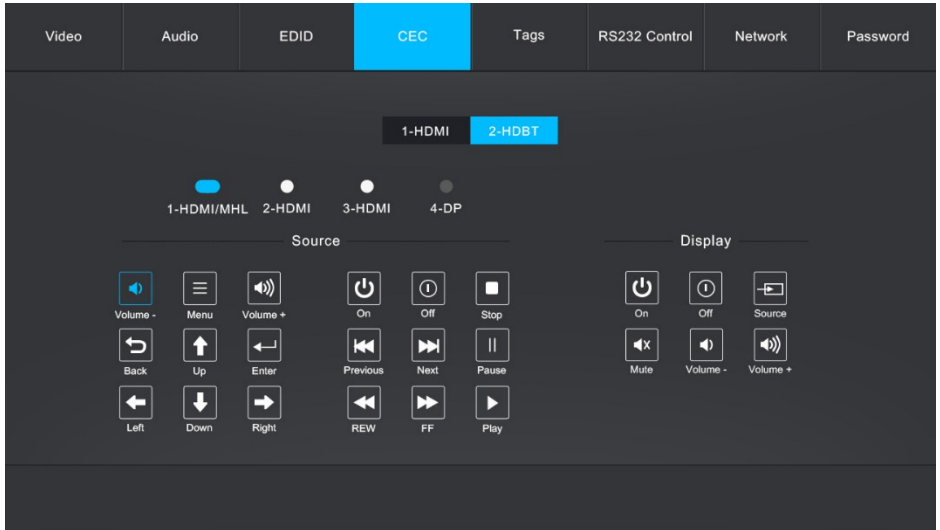

- **Source Control:** Select the input source which needs to be control, and then press source control button as need.
- **Display Control:** Press control button as need.

### 7.5 Tags Setting


The screenshot shows the 'Tags' menu in a dark-themed web interface. At the top, there is a navigation bar with tabs: Video, Audio, EDID, CEC, Tags (highlighted in blue), RS232 Control, Network, and Password. Below the navigation bar, the main content area is divided into two sections: 'INPUTS' and 'Preset'. Under 'INPUTS', there are four input source labels: '1-HDMI/MHL', '2-HDMI', '3-HDMI', and '4-DP', each with a corresponding black rectangular input field. Under 'Preset', there are four preset labels: 'Preset 1', 'Preset 2', 'Preset 3', and 'Preset 4', each with a corresponding black rectangular input field. At the bottom center of the main content area, there is a blue 'Confirm' button.

- **INPUTS:** Modify the label of input sources.
- **Preset:** Modify the label of presets.



### 7.6 RS232 Control

#### 1) Port Mode

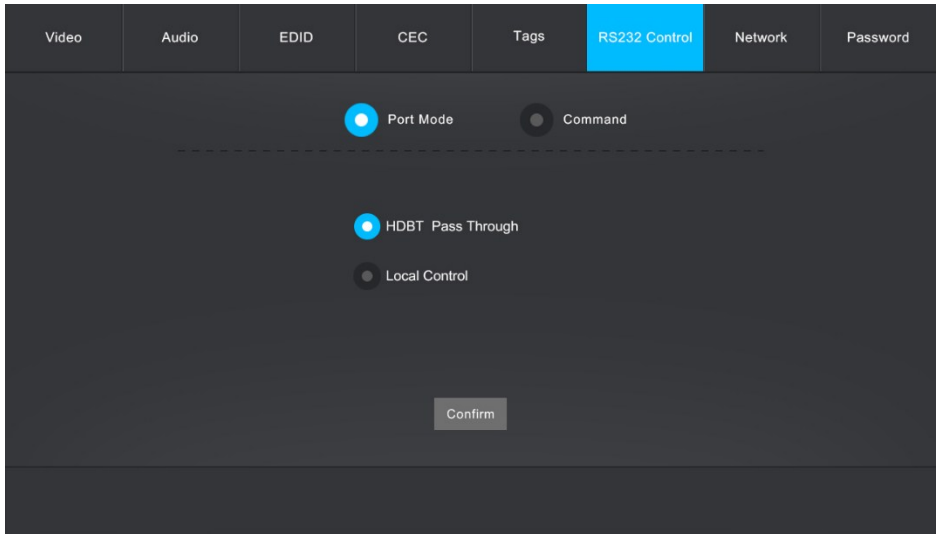

- **HDBT Pass Through:** Enable RS232 pass-through mode. The RS232 port of the switcher can be used to transfer commands to control other third-party devices.
- **Local Control:** Disable RS232 pass-through mode. The RS232 port of the switcher is used to connect control device (such as PC) to control the switcher.

### 2) Command

The screenshot shows the RS232 Control interface. The 'Command' radio button is selected. Under 'Command', the 'Local' button is selected. The 'ASCII' radio button is selected. The 'Baud Rate' dropdown menu is open, showing the following options: 9600, 2400, 4800, 9600, 19200, 38400, 57600, and 115200. The 'Command Ending' is set to 9600. The 'Command' field is empty. There are 'Trigger On:' and 'Trigger Off:' fields, both empty, with 'Send' buttons next to them. A 'Save' button is at the bottom right.


- Select **Local** or **HDBT** control mode.
  - ✓ **Local**: Send RS232 commands to control the local third-party which is connected to the RS232 port of the SM42T switcher.
  - ✓ **HDBT**: Send RS232 commands to control the far-end third-party (such as projector) which is connected to the RS232 port of HDBaseT receiver.
- Select **HEX** or **ASCII** format.
- **Baud Rate**: Supports 2400, 4800, 9600, 19200, 38400, 57600 or 115200.
- **Command Ending**: **NULL**, **CR**, **LF** or **CR+LF** can be chosen.
- **Command**: Type command in this box to control the third-party device.

### 7.7 Network Setting

Video	Audio	EDID	CEC	Tags	RS232 Control	Network	Password
MAC Address: 44-33-4C-C9-35-12							
DHCP <input checked="" type="checkbox"/> Static IP <input type="checkbox"/>							
IP Address: 192.168.0.178							
Subnet Mask: 255.255.255.0							
Gateway: 192.168.0.1							
<input type="button" value="Confirm"/>							

- Static IP or Dynamic Host Configuration Protocol (DHCP)
- Modify the static IP Address, Subnet Mask, and Gateway.

### 7.8 Password Setting

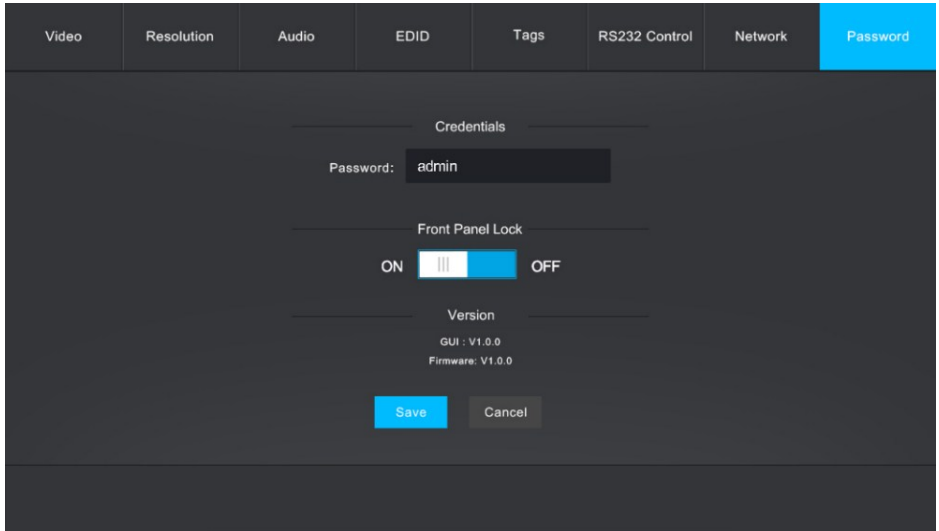


The screenshot shows the 'Password' settings page. At the top, there is a navigation bar with tabs for Video, Resolution, Audio, EDID, Tags, RS232 Control, Network, and Password. The 'Password' tab is selected and highlighted in blue. Below the navigation bar, the 'Credentials' section contains a 'Password:' label followed by a text input field containing the text 'admin'. Below this, the 'Front Panel Lock' section features a toggle switch currently set to 'OFF', with 'ON' and 'OFF' labels on either side. The 'Version' section displays 'GUI: V1.0.0' and 'Firmware: V1.0.0'. At the bottom, there are two buttons: 'Save' (highlighted in blue) and 'Cancel' (greyed out).

- Modify the login password.
- Lock or unlock the front panel buttons.

### 7.9 GUI Update

Please visit at <http://192.168.0.178:100> for GUI online upgrade.

Type the username and password (the same as the GUI log-in setting, modified password will be available only after rebooting) to login the configuration interface. After that, click **Administration** in the source menu to get to **Upload Firmware** as shown below:

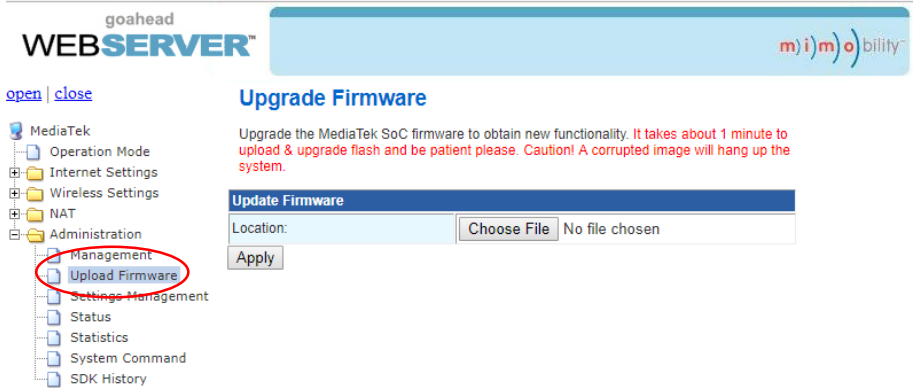

Select the update file and click **Apply** button, it will start upgrading then.

### 8. RS232 Control

Connect the RS232 port to control device (such as PC) with RS232 cable. The switcher can be controlled by sending RS232 commands.

#### 8.1 RS232 Control Software

- **Installation:** Copy the control software file to the control PC.
- **Uninstallation:** Delete all the control software files in corresponding file path.

#### Basic Settings:


Connect the switcher with all input devices and output devices needed, then to connect it with a PC which is installed with RS232 control software. Double-click the software icon to run this software.

Here take the software **CommWatch.exe** as example:



## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

The main view is shown as below:

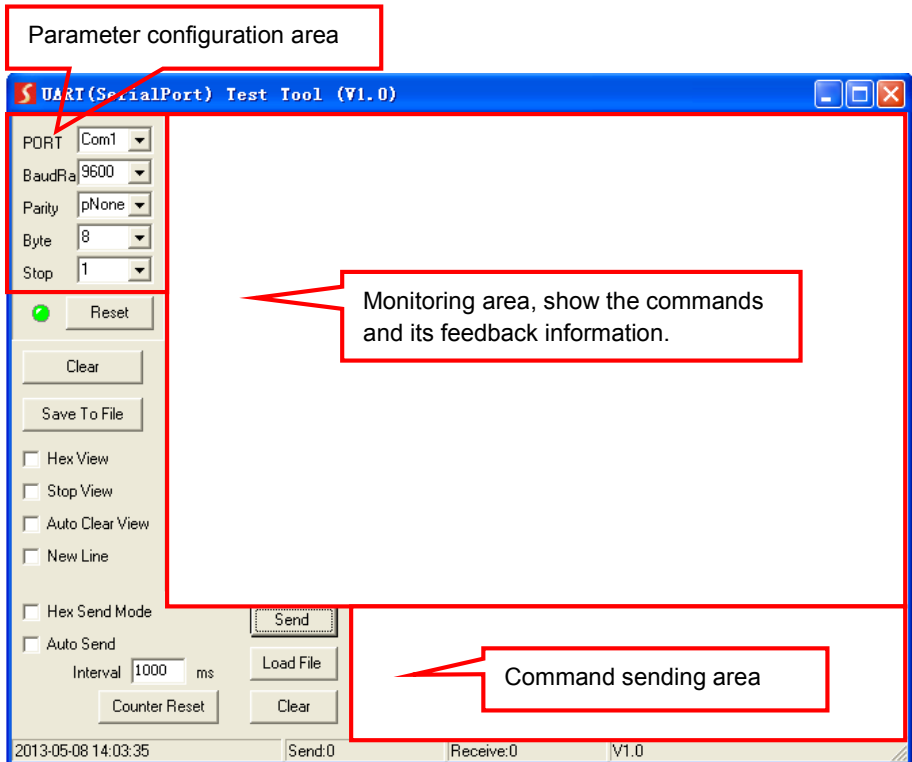

Please set the parameters of COM number, bound rate, data bit, stop bit and the parity bit correctly, and then you are able to send command in command sending area.

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 8.2 RS232 Communication Command

**Communication protocol:** RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

**Note:** All commands not need to end with "<CR><LF>".

#### 8.2.1 Device Control

Command	Description	Feedback Example
<b>PowerON.</b>	Power on system.	Power ON!
<b>PowerOFF.</b>	System standby.	Power OFF!
<b>/*Name.</b>	Report system name.	4x2 Matrix Switcher
<b>/*Type.</b>	Report system model.	SM42T
<b>/*Version.</b>	Report firmware version.	V1.0.0
<b>STA.</b>	Report system status.	... ..
<b>Lock.</b>	Lock front panel buttons.	Front Panel Locked!
<b>Unlock.</b>	Unlock front panel buttons.	Front Panel UnLock!
<b>GetGuiIP.</b>	Report GUI IP.	GUI_IP:192.168.0.178
<b>SetGuiIP: [xxx.xxx.xxx.xxx].</b>	Set GUI IP to [xxx.xxx.xxx.xxx].	
<b>SetNoSigTime:[xxx].</b>	Set the automatic power-off time to xxx. Set the "xxx" as "0" to disable this function.	No Signal Auto StandBy Time Is 0S!
<b>Rs232HDBTBypassON</b> .	Enable RS232 pass-through mode.	Rs232 HDBT Bypass ON!
<b>Rs232HDBTBypassOFF</b> <b>F.</b>	Disable RS232 pass-through mode.	Rs232 HDBT Bypass OFF!
<b>RemoteCtrMcuON.</b>	Allows the switcher to be controlled by the far-end control device which is connected to the RS232 port of HDBaseT receiver.	Remote Control MCU ON!
<b>RemoteCtrMcuOFF.</b>	The switcher cannot be controlled by the far-end control device	Remote Control MCU OFF!
<b>RST.</b>	Factory reset.	Factory Default!



## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 8.2.2 Source Switching

Command	Description	Feedback Example
<b>HDMI[x].</b>	Switch input [x] to HDMI output. x=1~4.	Example: HDMI4. Feedback: HDMI Out Switch To 04!
<b>HDBT[x].</b>	Switch input [x] to HDBT output. x=1~4.	Example: HDBT4. Feedback: HDBT Out Switch To 04!
<b>[x]ALL.</b>	Switch input [x] to HDMI and HDBT outputs. x=1~4.	Example: 1ALL. Feedback: HDMI Out Switch To 01! HDBT Out Switch To 01!
<b>HDBTA.</b>	Automatically switch input source to HDBT output.	HDBT Out Switch Auto Mode!
<b>HDBTM.</b>	Manually switch input source to HDBT output.	HDBT Out Switch Manual Mode!
<b>HDMIA.</b>	Automatically switch input source to HDMI output.	HDMI Out Switch Auto Mode!
<b>HDMIM.</b>	Manually switch input source to HDMI output.	HDMI Out Switch Manual Mode!
<b>HDBTBlackON.</b>	Enable HDBT output black screen.	HDBT Out Black ON!
<b>HDBTBlackOFF.</b>	Disable HDBT output black screen.	HDBT Out Black OFF!
<b>HDMIBlackON.</b>	Enable HDMI output black screen.	HDMI Out Black ON!
<b>HDMIBlackOFF.</b>	Disable HDMI output black screen.	HDMI Out Black OFF!

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 8.2.3 Audio Control

Command	Description	Feedback Example
[x]Gain:[y].	Set the audio gain of input [x] to [y]. x=1~4, y=0~10.	Example: 1Gain:5. Feedback: Input 1 Gain Level 5!
HDMIABON.	Enable HDMI output audio bypass mode.	HDMI Audio Bypass ON!
HDMIABOFF.	Disable HDMI output audio bypass mode.	HDMI Audio Bypass OFF!
HDBTABON.	Enable HDBT output audio bypass mode.	HDBT Audio Bypass ON!
HDBTABOFF.	Disable HDBT output audio bypass mode.	HDBT Audio Bypass OFF!
MicVolume:xx.	Set the MIC volume to xx.	Volume of MIC 80!
MicVolume+.	Increase MIC volume.	Volume of MIC 81!
MicVolume-.	Decrease MIC volume.	Volume of MIC 79!
MicMute.	Mute MIC audio.	Volume of MIC Mute!
MicUnMute.	Unmute MIC audio.	Volume of MIC UnMute!
LineVolume:xx.	Set the line volume to xx.	Volume of Line 50!
LineVolume+.	Increase line volume.	Volume of Line 51!
LineVolume-.	Decrease line volume.	Volume of Line 49!
LineMute.	Mute line audio.	Volume of Line Mute!
LineUnMute.	Unmute line audio.	Volume of Line Unmute!
HDMIOutVolume:xx.	Set the HDMI output volume to xx.	Volume of HDMI Out 70!
HDMIOutVolume+.	Increase HDMI output volume.	Volume of HDMI Out 71!
HDMIOutVolume-.	Decrease HDMI output volume.	Volume of HDMI Out 69!
HDMIOutVolumeMute.	Mute HDMI output audio.	Volume of HDMI Out Mute!
HDMIOutVolumeUnMute.	Unmute HDMI output audio.	Volume of HDMI Out Unmute!
HDBTOutVolume:xx.	Set the HDBT output volume to xx.	Volume of HDBT Out 60!
HDBTOutVolume+.	Increase HDBT output volume.	Volume of HDBT Out 61!

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

Command	Description	Feedback Example
HDBTOutVolume-	Decrease HDBT output volume.	Volume of HDBT Out 59!
HDBTOutVolumeMute.	Mute HDBT output audio.	Volume of HDBT Out Mute!
HDBTOutVolumeUnMute.	Unmute HDBT output audio.	Volume of HDBT Out Unmute!

### 8.2.4 Preset Setting

Command	Description	Feedback Example
PresetSave[x].	Store the current switching status to preset [x]. x=1~ 4.	Example: PresetSave1. Feedback: Preset1 Save Success!
PresetRecall[x].	Recall the preset [x]. x=1~ 4.	Example: PresetRecall1. Feedback: Preset1 Recall Success! HDMI Out Switch To 04! HDBT Out Switch To 01!

### 8.2.5 EDID Management

Command	Description	Feedback Example													
EDIDSTA[xx].	Get the EDID status of input [xx]. xx=00 ~ 05.	Example: EDIDSTA02. Feedback: Input 2 EDID From 02 Internal EDID! Explanation: The input 3 is invoking the EDID 2.													
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">xx</th> <th>Input</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>All inputs</td> </tr> <tr> <td>01</td> <td>1-HDMI/MHL</td> </tr> <tr> <td>02</td> <td>2-HDMI</td> </tr> <tr> <td>03</td> <td>3-HDMI</td> </tr> <tr> <td>04</td> <td>4-DP 1</td> </tr> <tr> <td>05</td> <td>4-DP 2</td> </tr> </tbody> </table> <p><b>Note:</b> The 4-DP input port supports MST (Multi-Stream Transport). It will automatically output dual path signals when connect to one source device.</p>	xx	Input	00	All inputs	01	1-HDMI/MHL	02	2-HDMI	03	3-HDMI	04	4-DP 1	05	4-DP 2
xx	Input														
00	All inputs														
01	1-HDMI/MHL														
02	2-HDMI														
03	3-HDMI														
04	4-DP 1														
05	4-DP 2														

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

Command	Description	Feedback Example												
<b>EDIDUpgrade[x].</b>	<p>Upgrade the EDID data of the input port [x].</p> <p>x=0: All inputs. x=1~4: 1~4 input. x=U: User-defined EDID.</p> <p>When the command applied, system prompts to upload the EDID file (.bin). Operation will be cancelled in 10 seconds. Please disconnect HDBT connection before sending command to ensure the data can be received successfully.</p>	<p>Please send the EDID file ... EDID Upgrade OK!</p>												
<b>EDID/[x]/[y].</b>	<p>The input [x] invoke built-in EDID [y].</p> <p>x=0: All inputs. x=1~4: 1~4 input.</p> <table border="1" style="margin-left: 20px;"> <thead> <tr> <th style="text-align: center;">y</th> <th style="text-align: center;">EDID</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td>720p 2D PCM</td> </tr> <tr> <td style="text-align: center;">2</td> <td>1080p 2D PCM</td> </tr> <tr> <td style="text-align: center;">3</td> <td>4K@60Hz 4:2:0 Dolby/DTS 5.1 CH</td> </tr> <tr> <td style="text-align: center;">4</td> <td>4K@60Hz 4:4:4 HDR 7.1CH</td> </tr> <tr> <td style="text-align: center;">5</td> <td>User-defined EDID</td> </tr> </tbody> </table>	y	EDID	1	720p 2D PCM	2	1080p 2D PCM	3	4K@60Hz 4:2:0 Dolby/DTS 5.1 CH	4	4K@60Hz 4:4:4 HDR 7.1CH	5	User-defined EDID	EDID/3/3
y	EDID													
1	720p 2D PCM													
2	1080p 2D PCM													
3	4K@60Hz 4:2:0 Dolby/DTS 5.1 CH													
4	4K@60Hz 4:4:4 HDR 7.1CH													
5	User-defined EDID													
<b>EDIDGHDMI.</b>	Get the EDID data from HDMI output.													
<b>EDIDGHDBT.</b>	Get the EDID data from HDBT output.													
<b>EDIDM[x]B[y].</b>	Set the EDID data of output [x] to input [y]. x=1~2, y=1~4.	<p>Example: EDIDM1B1.</p> <p>Feedback: Input 1 EDID Upgrade OK By 01 EXT EDID!</p>												

### 8.2.6 CEC Control

If the input sources and displays are supports CEC, they can be controlled by sending CEC commands to replace IR remote.

**Step 1:** According to the below command to enable CEC control.

Command	Description	Feedback Example
CEC_ON.	Enable CEC	CEC ON!
CEC_OFF.	Disable CEC	CEC OFF!

**Step 2:** According to the below command format to send specific command to control input source or display device.

#### CEC[**I/O**][**port**][**command**].

- The “[**I**]” represents the input port. The “[**O**]” represents the output port.
- The “[**port**]” represents the port number. The input ports are 01~04, and the output ports are 01~02.
- The “[**port**]” is “**FF**” for sending command to all input or output ports.
- The “[**command**]” represents the specific command from the table below.

#### ✓ Control the input source:

Command	Description	Example and Feedback
CECI[ <b>port</b> ]00.	Confirm operation (Enter).	CECI0100.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]01.	UP.	CECI0101.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]02.	DOWN.	CECI0102.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]03.	LEFT.	CECI0103.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]04.	RIGHT.	CECI0104.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]0A.	Enter main menu.	CECI010A.
		CEC_IN_01_SEND_SUCCESS!
CECI[ <b>port</b> ]0D.	Exit menu.	CECI010D.
		CEC_IN_01_SEND_SUCCESS!

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

CECI[port]41.	Volume up.	CECI0141.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]42.	Volume down.	CECI0142.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]43.	Mute	CECI0143.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]44.	Play.	CECI0144.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]45.	Stop.	CECI0145.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]46.	Pause.	CECI0146.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]48.	Rewind.	CECI0148.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]49.	Fast forward.	CECI0149.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]4B.	Forward.	CECI014B.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]4C.	Backward.	CECI014C.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]6C.	Power off.	CECI016C.
		CEC_IN_01_SEND_SUCCESS!
CECI[port]6D.	Power on.	CECI016D.
		CEC_IN_01_SEND_SUCCESS!

### ✓ Control the output display:

Command	Description	Example and Feedback
CECO[port]41.	Volume up.	CECO0141.
		CEC_OUT_01_SEND_SUCCESS!
CECO[port]42.	Volume down.	CECO0142.
		CEC_OUT_01_SEND_SUCCESS!
CECO[port]43.	Mute	CECO0143.
		CEC_OUT_01_SEND_SUCCESS!
CECO[port]6C.	Power off.	CECO016C.
		CEC_OUT_01_SEND_SUCCESS!
CECO[port]6D.	Power on.	CECO016D.
		CEC_OUT_01_SEND_SUCCESS!

## 4x2 HDMI 2.0 Presentation Switcher with Matrix Outputs

### 8.2.7 Third-party Device Control

The switcher supports RS232 pass-through control, the third-party device can be controlled by RS232 command, and the command format as shown below:

Command	Function	Command Example
<code>/+[X]/[Y]:xxx.</code>	<ul style="list-style-type: none"> <li>● xxx: ASCII characters.</li> <li>● Y: Represents the RS232 port.</li> <li>✓ Y=1: The RS232 port of SM42T switcher.</li> <li>✓ Y=2: The RS232 port of HDBaseT receiver.</li> <li>● X: Represents the baud rate of third-party device.</li> <li>✓ X=1, 2400</li> <li>✓ X=2, 4800</li> <li>✓ X=3, 9600</li> <li>✓ X=4, 19200</li> <li>✓ X=5, 38400</li> <li>✓ X=6, 57600</li> <li>✓ X=7, 115200</li> </ul>	<p><code>/+3/2:123456.</code></p> <p>Send the command "123456" to the third-party device. The baud rate is 9600.</p>
<code>CMDON+[X]:xxx.</code>	Power on the third-party device.	<code>CMDON/+3:455665.</code>
<code>CMDOFF+[X]:xxx.</code>	Power off the third-party device.	<code>CMDOFF/+3:455666.</code>

**Note:** When send HEX command in this box, the `/+[X]/[Y]:` and the end mark `.` must be converted to hexadecimal characters. For example, send the HEX command **"F0 01 01 02 0A"** to the third-party whose baud rate is 9600. The `/+3/2:` and the point `.` is converted to `"2F 2B 33 2F 32 3A"` and `"2E"`, thus the complete HEX command is **"2F 2B 33 2F 32 3A F0 01 01 02 0A 2E"**.


### 9. Firmware Upgrade

Please follow the steps as below to upgrade firmware by the **FIRMWARE** port on the rear panel:


- 1) Prepare the latest upgrade file (.bin) and rename it as “USERAPP.bin” on PC.
- 2) Power off the switcher, and connect the **FIRMWARE** port of switcher to the PC with USB cable.
- 3) Power on the switcher, and then the PC will automatically detect a U-disk named of “BOOTDISK”.
- 4) Double-click the U-disk, a file named of “READY.TXT” would be showed.
- 5) Directly copy the latest upgrade file (.bin) to the “BOOTDISK” U-disk.
- 6) Reopen the U-disk to check the filename “READY.TXT” whether automatically becomes “SUCCESS.TXT”, if yes, the firmware was updated successfully, otherwise, the firmware updating is fail, the name of upgrade file (.bin) should be confirm again, and then follow the above steps to update again.
- 7) Remove the USB cable after firmware upgrade.
- 8) After firmware upgrade, the switcher should be restored to factory default by sending command.



## 10. Panel Drawing

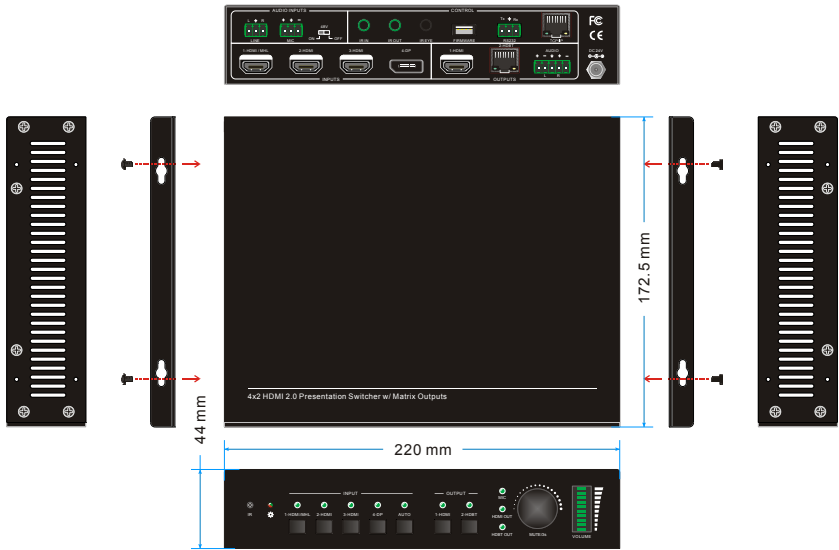

4x2 4K Presentation Switcher

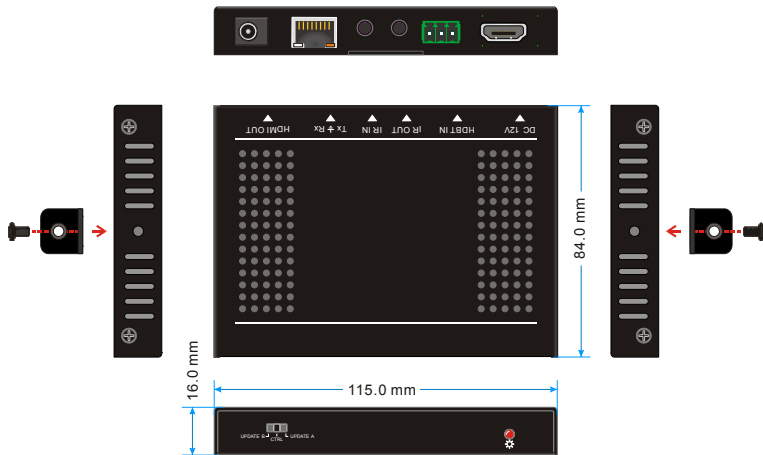

HDBaseT Receiver

## 11. Troubleshooting & Maintenance

Problems	Potential Causes	Solutions
Output image with snowflake.	Bad quality of the connecting cable.	Try another high-quality cable.
	Fail or loose connection.	Make sure the connection is good.
No output image when switching.	No signal at the input / output end.	Check with oscilloscope or multimeter if there is any signal at the input/output end.
	Fail or loose connection.	Make sure the connection is good.
	The switcher is broken.	Send it to authorized dealer for repairing.
<b>POWER</b> indicator doesn't work or no respond to any operation.	Fail connection of power cord.	Make sure the power cord connection is good.
EDID management does not work normally.	The HDMI cable is broken at the output end.	Change for another HDMI cable which is in good working condition.
Static becomes stronger when connecting the video connectors.	Bad grounding.	Check the grounding and make sure it is connected well.
Cannot control the device by control device (e.g. a PC) through RS232 port.	Wrong RS232 communication parameters.	Type in correct RS232 communication parameters.
	Broken RS232 port.	Send it to authorized dealer for checking.
Cannot control the device by front panel buttons while can control it through RS232 port	The front panel buttons are locked.	Send command <b>!%Unlock</b> ; to unlock the front panel buttons.

**Note:** If your problem still remaining after following the above troubleshooting steps, please find further assistance.

## 12. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

### 1) Warranty

The limited warranty period of the product is fixed three years.

### 2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

### 3) Warranty Exclusion

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
  - ✓ Normal wear and tear.
  - ✓ Use of supplies or parts not meeting our specifications.
  - ✓ No certificate or invoice as the proof of warranty.
  - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - ✓ Damage caused by force majeure.
  - ✓ Servicing not authorized by distributor.
  - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

### 4) Documentation

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

**Remarks:** Please contact your local distributor for further assistance or solutions.